Battery-Operated Corkscrew

Its easy to use Open Wine Bottles With the Push of a Button works on most standard and flanged-neck bottles.



If you enjoy drinking wine but have a history of broken or floating corks, the Battery-Operated Corkscrew is now available to ease your embarrassment. Just press the corkscrew's tip against the center of the cork, touch the button and voila! It uncorks itself, with no twisting, pulling or lifting.

Model: SH-642

Part#: Smarthome 91331

Features

- No twisting, pulling or lifting
- Works on most wine bottles
- Includes integrated foil cutter

Specifications

Approx. Opening Time: 15 seconds

Dimensions

Size: 9 1/4" x 2 1/4" x 1 5/8"

