

 SMARTHOME

 


[WWW.SMARTHOMEUAE.COM](http://WWW.SMARTHOMEUAE.COM)



# Sample

## 1. Picture

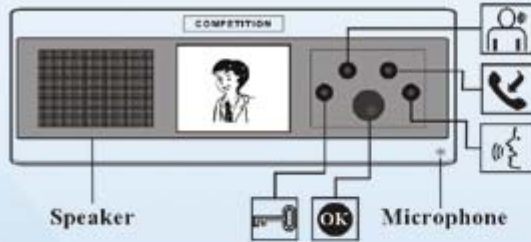

Speaker

OK

Microphone



OK



Talk



Listen



Inner talking




Door releasing

## 2. Main menu



## 3. Back

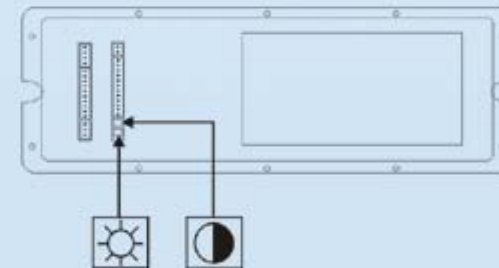

Contrast

Brightness

## (1) Calling

1. Press the room number to call the indoor monitor.




2. The indoor monitor and all extensions sound melody with the flashing.



## (2) Talking


4. Press the **OK** button to talk with the visitor, press the button again to stop talking.

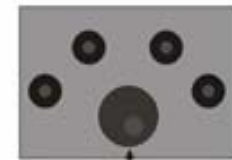


3. The monitor displays the picture of the visitor. The screen should be cut off after 2 minutes without any operation.




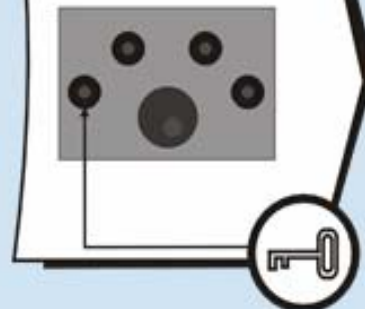 
## (3) Door Releasing

5. Press the  button to release the lock when calling.

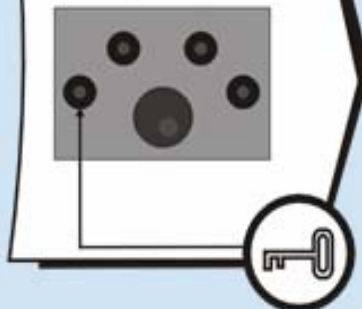


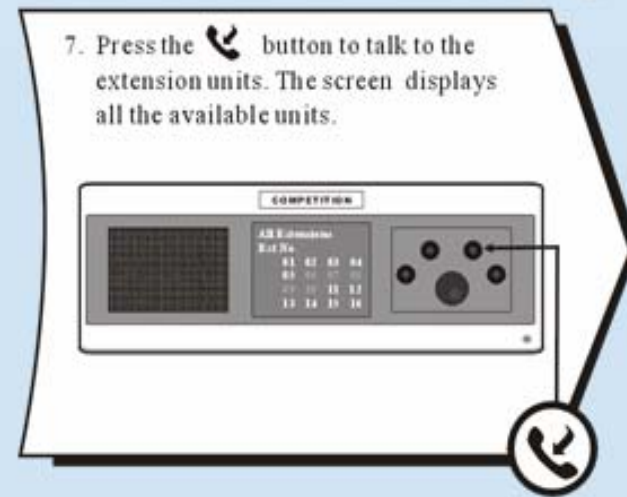 
## (4) Monitoring

6. Press the  button to monitor outside through the outdoor station.




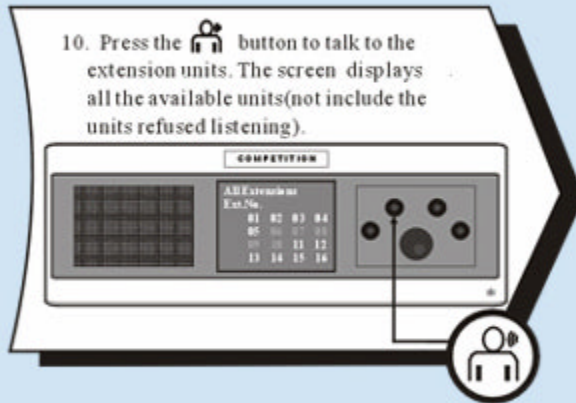 
## (5) Inner Talking

7. Press the  button to talk to the extension units. The screen displays all the available units.



## (6) Inner Listening

10. Press the  button to talk to the extension units. The screen displays all the available units(not include the units refused listening).



11. Turn the knob to select the All extensions or someone and press the knob to listen to all of them or the one.

All Extensions  
Ext.No.

01	02	03	04
05	06	07	08
09	10	11	12
13	14	15	16

12. The screen displays On if get through or Error. Press the knob again to stop talking.

All Extensions  
Ext.No.

01	02	03	04
05	06	07	08
09	10	11	12
13	14	15	16

## (7) Music

13. Select Play Music in the main menu and press the knob to play music with all the extensions. (The music is rely on Ext. Music source)



14. Turn the knob with pressing it while playing music to adjust the music volume. Press it again to stop the music.



## (8) Time&Alarm

15. Select Time&Alarm in the main menu and press the knob to start.



16. Select Set time in the main menu and press the knob to start to set or adjust system time.



## 6. Set Alarm Station

### (1) Set All Alarm

1. Select **Set Alarm Station** in the main menu and press the knob to start.

```
Play Music
Time & Alarm
Set Alarm Station
Alarm Signal
Screen Saver On
Set Room Number
```

2. The screen displays the password interface. Turn the knob to select 4 digits and press the knob for each. Select the **C** to cancel the wrong digits.

```
Password:
* * * *
 1 2 3 C
 4 5 6 0
 7 8 9 ←
```

3. Input correct password, the screen displays the setting interface. The primary password is 0000.

```
Set All
Cancel All
AS 1 off extended ok
AS 2 off extended ok
AS 3 off extended ok
AS 4 off extended ok
AS 5 off extended ok
Extended time 00s
Change password Back
```

4. Select **Set All** and press the knob, the screen will display all the alarm stations are set. Select **back** to return to the main menu.

```
Set All
Cancel All
AS 1 on extended ok
AS 2 on extended ok
AS 3 on extended ok
AS 4 on extended ok
AS 5 on extended ok
Extended time 00s
Change password Back
```

### (2) Cancel All Alarm

5. Turn the knob to select **Cancel All** to cancel alarm stations set. Press the knob confirm.

```
Set All
Cancel All
AS 1 off extended ok
AS 2 off extended ok
AS 3 off extended ok
AS 4 off extended ok
AS 5 off extended ok
Extended time 00s
Change password Back
```

### (3) Set Instant Alarm Station

6. Turn the knob to select **on**. Then turn the knob right with pressing it to select **extended** ..

```
Set All
Cancel All
AS 1 on extended ok
AS 2 off extended ok
AS 3 off extended ok
AS 4 off extended ok
AS 5 off extended ok
Extended time 00s
Change password Back
```

7. Lose the knob, and turn it to select **instant** and press it to confirm to set. Then back to the upper menu.

```
Set All
Cancel All
AS 1 on instant ok
AS 2 off extended ok
AS 3 off extended ok
AS 4 off extended ok
AS 5 off extended ok
Extended time 00s
Change password Back
```

#### (4) Set Extended Alarm

8. Select AL2 and set it on.

```

Set All
Cancel All
AS 1 on instant ok
AS 1 on extended ok
AS 3 off extended ok
AS 4 off extended ok
AS 5 off extended ok
Extended time 00s
Change password Back
    
```

9. Turn the knob right with pressing it to select extended. Then press it to save it.

```

Set All
Cancel All
AS 1 on instant ok
AS 1 on extended ok
AS 3 off extended ok
AS 4 off extended ok
AS 5 off extended ok
Extended time 00s
Change password Back
    
```

10. Turn the knob with pressing it to select Extended time and press the knob to set it.

```

Set All
Cancel All
AS 1 on instant ok
AS 2 on extended ok
AS 3 off extended ok
AS 4 off extended ok
AS 5 off extended ok
Extended time 00s
Change password Back
    
```

11. The extended time is flashing. Turn the knob to select the right time intervals and press the knob to save it.

```

Set All
Cancel All
AS 1 on instant ok
AS 2 on extended ok
AS 3 off extended ok
AS 4 off extended ok
AS 5 off extended ok
Extended time 30s
Change password Back
    
```

#### Notice

1. The alarm station AL 2 will alarm after being triggered for 30 seconds (The extended time can be set to 0-90 seconds).
2. The alarm stations should be available after setting and returning back to the main menu for 60 seconds.
3. The alarm stations should be available after setting for 90 seconds without returning back to the main menu.

#### (5) Cancel Instant Alarm Stations

12. When triggering the alarm station number is flashing and the monitor alarms for 30 seconds. Press the knob to stop alarm.

```

Station Situation
AS 1 on AS 2 off
AS 3 off AS 4 off
AS 5 off AS 6 off
AS 7 off AS 8 off
    
```

13. The screen displays the password interface. Turn the knob to select 4 digits and press the knob each to input the password.

```

Password
* * * *
1 2 3 C
4 5 6 0
7 8 9 ←
    
```

## (6) Cancel Extended Alarm Stations

 
14. If the password is correct, the system will back to the main menu with all alarm stations cancelled.



15. If the password is not correct, it will display Error and keep the same vision of password.



16. When triggering, it displays the alarm station number is flashing without alarm.

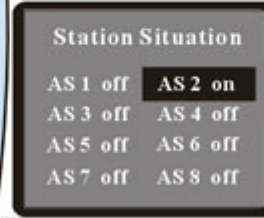

17. The screen displays the password interface. Turn the knob to select 4 digits and press the knob each to input the password.



18. Input the right password in the extended time, all alarm stations will be cancelled, and it should be back to the main menu.




### Notice

 **If the alarm stations are not cancelled after they have alarmed, they should stop alarming after 30 seconds, and should be available again to be the instant stations.**

## (7) Alarm Station Status

19. The station status shows in the Set Alarm Station interface. It is a self checking mode.

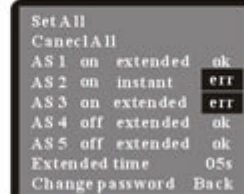

err :  
 (1) Alarm station is triggered  
 (2) Detectors or sensors get wrong connection with the Alarm station  
 (3) Wrong cable connection

ok : everything is correct




## (8) Alarm Signal

 20. Select **Alarm Signal** in the main menu and press the knob to start.



21. All alarm signals show in Alarm Signal interface.

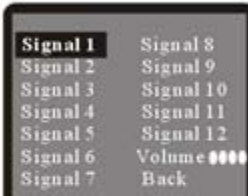


The alarm signals are:

- |                      |                        |
|----------------------|------------------------|
| 1. Fur Elise         | 8. My Heart Will Go On |
| 2. Romance Anonimo   | 9. The Butterfly Lover |
| 3. A Comm Amour      | 10. Moscow Nights      |
| 4. Concerto Pour U.J | 11. Music 1            |
| 5. Eastern Pearl     | 12. Music 2            |
| 6. Happy Birthday    |                        |
| 7. Red River Valley  |                        |

22. Turn the knob to select the right alarm signal and press it to save. (Turn it with pressing can turn left or right).



23. Turn the knob to select **Volume** and press it. Then turn it to adjust the volume then press it to save it and **Back**.

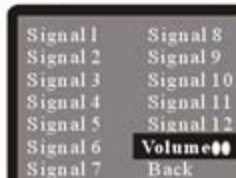

24. Select **Screen Saver On** in the main menu. And press the knob to stop menu and standby. Press again to show the main menu.



## (9) Sreen Saver

## Set Room Number

25. Select **Set Room Number** in the main menu and press the knob to start.



Play Music  
Time & Alarm  
Set Alarm Station  
Alarm Signal  
Screen Saver On  
Set Room Number

26. Input the 4 digits setting password.



Password:  
1 2 3 C  
4 5 6 0  
7 8 9 ←

27. Turn the knob to select digit then turn the knob with pressing it to set the other digits. Press it to save the new room number then back to the main menu.



New room number:  
0 1 0 3

### Notice

**Ask the local distributor for the setting password.**

# Diagram

