



Instruction

Installation and Programming

Mark Door

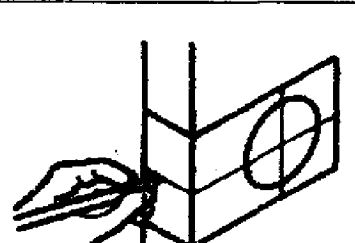


A. Use template provided to mark door for drilling 1044mm(41") from base of the door or 4' above door knob or lever, center to center

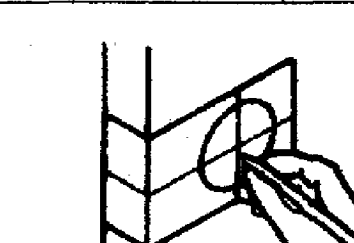


B. Use the template to select backset-2 3/8" (60mm) or 2 3/4" (70mm)

Drilling

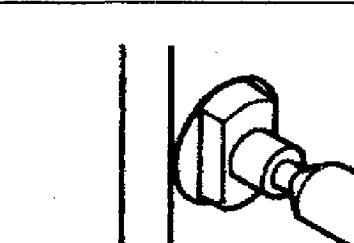


A. Bore 2 1/8" (54mm) hole through door face from both sides of door to avoid damaging door surface

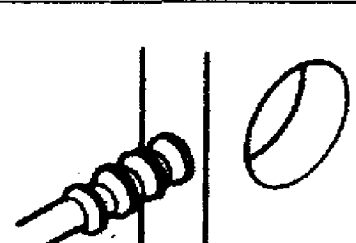


B. Drill 24mm (15/16") or 25mm (1'0 hole through door edge.


Install Deadbolt Latch

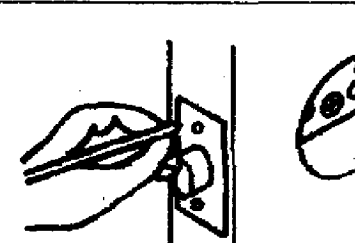


A. Insert deadbolt latch into hole. Mark the plate all around, and the screw hole.

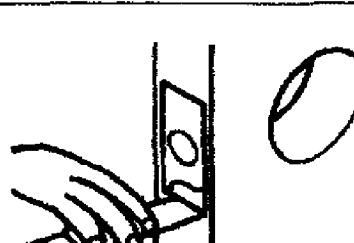

B. Chisel recess for face plate

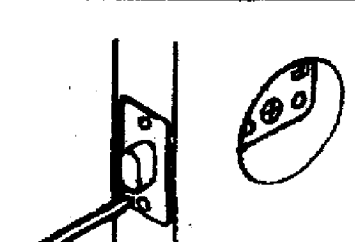


Secure Latch with Screws

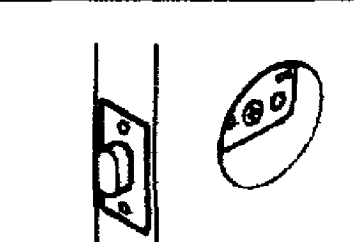


Make sure the face plate of the latch is even with edge of door


Install Door Jamb

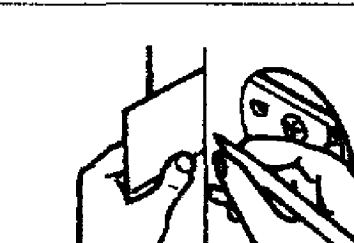


A. Shut door and mark door jamb exactly opposite center of bolt hole by tracing hole

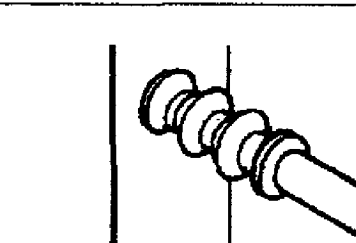

B. Drill an enlarge hole jamb, 1 3/8" (35mm), and 1/2" (12.7mm) deep

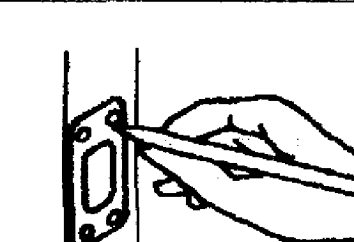


Base on mark, chisel recess at least 1/10" (2.5mm) for strike box

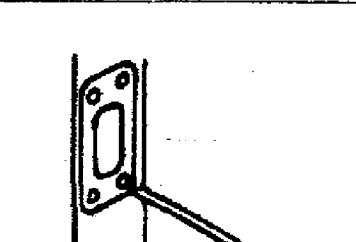


Secure strike plate with screws

* Deadbolt latch must be able to operate smoothly With Door Jamb, Strike Box, And Strike plate ,After Installation.

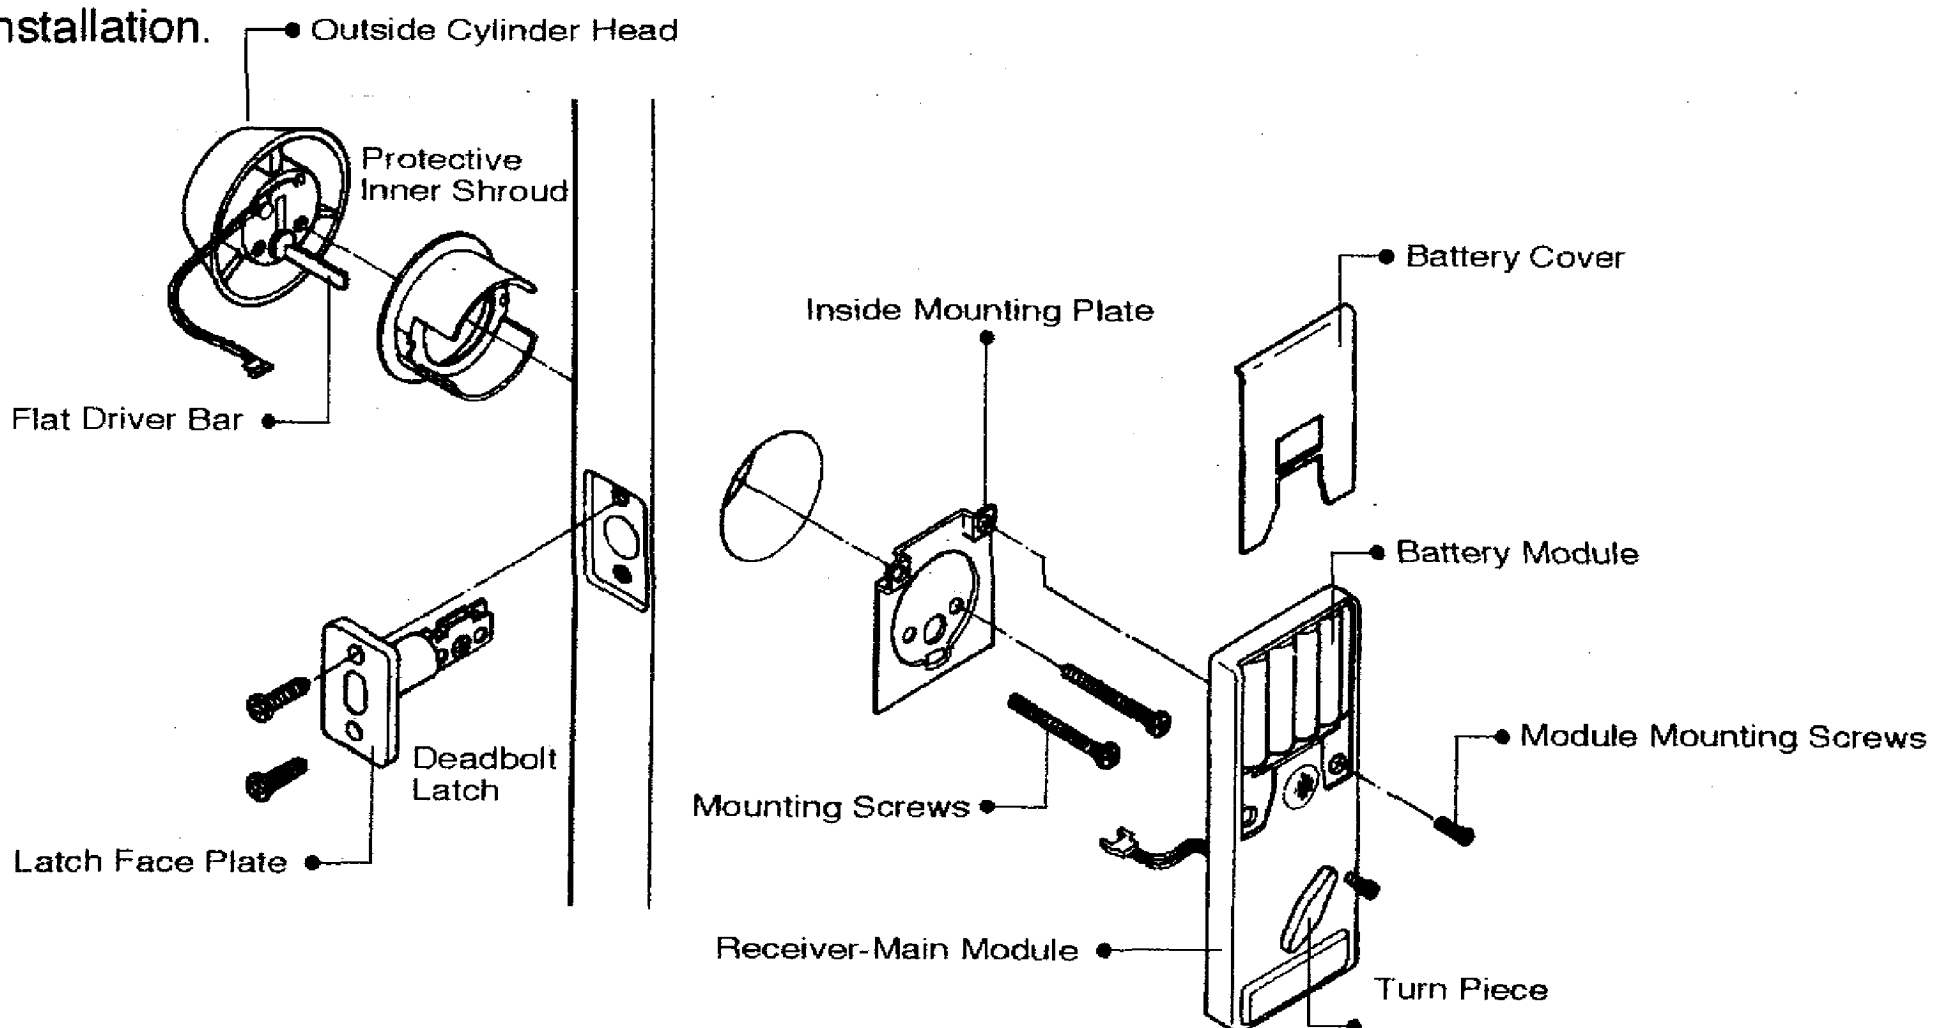

- Place the latch in an Unlock position, turn the Key and the Turnpiece to the most opposite direction from the door edge. Install the outside cylinder head with the flat driver bar parallel to the ground through cross-hole on the latch, then connect to the turnpiece.
- Place all the mounting screws then test for a smooth operations, if jam, adjust direction of procedure A to ensure a complete smooth operation.

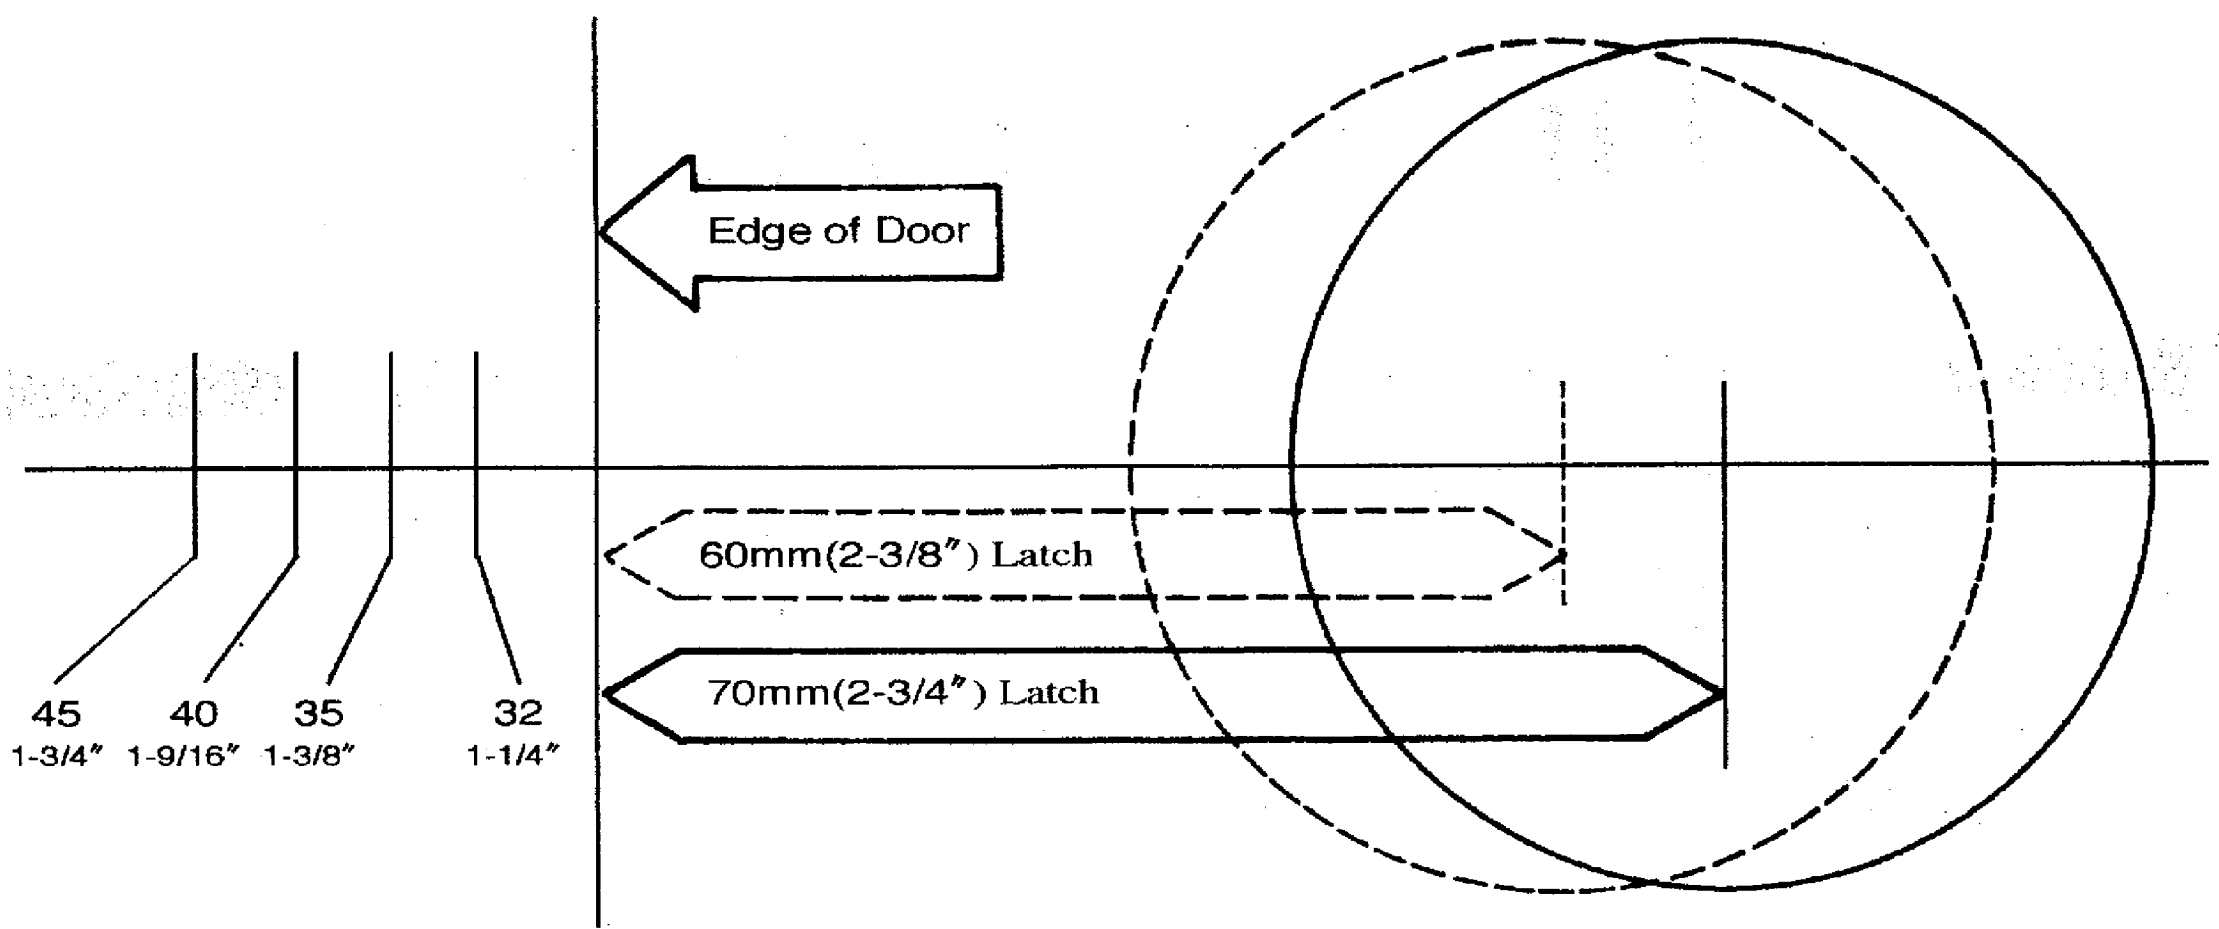

1. Open the battery cover, there are two buttons, labeled with " S " the set button and " C " the cancel buttons. Use a small sharp object such as a pen or a nail to operate these buttons.
2. Press " S " the set button and hear one Beep confirm tone, then press one remote control in front of the deadbolt to program. When heard 2 Beep confirm tones, this remote control is programmed to the lock.
3. Repeat procedure # 2 to program up to 30 different remote controls. A long Beep tone will sound when the lock is programmed over 30 remote controls.
4. To cancel programmed remote controls, press the " C " cancel button and hear one confirm Beep, then press a new remote control in front of the deadbolt and hear 2 confirmed Beep tone. This will erase ALL the remote controls previously programmed, leaving this new remote control the only one to operated the lock. Repeat procedure # 2 to program additional remote controls to operate the lock.
5. All the above command must be done within 5 seconds after the initial one Beep confirmation tone. The lock will not change any programming if fail to enter any new remote control within 5 seconds.
6. During operation if heard 10 consecutive Beep tone, means low battery level. Please replace batteries to make sure normal operation.
7. When hear 3 consecutive Beep tones, it means the door latch is Jam. Adjusting door to make sure a smooth operation.
8. Depend on the directions of the lock is on the door, 1Beep and 2 Beeps tones accordingly with visual flashes notify the user the door is lock or unlock.

