



THE GUITAMMER COMPANY INC.

...leaders in low frequency sound...

Instructions for Setting Up and Using the “Quick Connect - Quick Select Box”

This package is designed to enable the user to easily connect one to four ButtKickers to one ButtKicker Power Amplifier in a simple “plug ‘n’ play” fashion. The “Quick Connect – Quick Select Box” also operates as an “on / off” selector allowing the user to select whether or not a ButtKicker will receive power. The Quick Connect kit includes the necessary cables to connect the ButtKicker Power Amplifier to a RCA “subwoofer” output on an A/V receiver even while using a power subwoofer.

Before beginning, please make sure you have the following:

- “Quick Connect – Quick Select Box” (QCP)
- 12V DC power plug. Included with the QCP kit
- Four 12’ lengths of 14 gauge speaker wire with banana type connectors for connecting ButtKickers to “Quick Connect – Quick Select Box”. Included with the QCP kit
- One 20’ length of 14 gauge speaker wire with banana type connectors for connecting the “Quick Connect – Quick Select Box” to the ButtKicker Power Amplifier, Included with the QCP kit
- RCA “Y” connector used to split the “subwoofer out” on an A/V receiver, allows the use of a powered subwoofer and the ButtKicker power amplifier. Included with the QCP kit
- Speaker Level Interface Adaptor used to split the “subwoofer out” on an A/V receiver, allows the use of a powered subwoofer and the ButtKicker power amplifier. Used when A/V receiver does *not* have a RCA out. Included with the QCP kit
- 6’ RCA cable for connecting an A/V processor or receiver to the ButtKicker Power Amplifier. Included with the QCP kit.
- ButtKicker Power Amplifier, BKA1000-4. Sold separately.
- ButtKicker(s) that are already appropriately installed. Sold separately.
- A/V receiver, sold separately

Product Placement:

- The recommended placement for the “Quick Connect – Quick Select Box” is behind or underneath the home theater seating. The four enclosed 12’ lengths of speaker wire should be ample to reach from the “Quick Connect – Quick Select Box” to each ButtKicker.
- The recommended placement for the ButtKicker Power Amplifier is either behind the home theater seating or in the front of the room. The enclosed 20’ length of speaker wire that connects the amplifier to the “Quick Connect – Quick Select Box” should allow for either placement.

Quick Connect – Quick Select Setup:

1. **Make sure the ButtKicker Amplifier is turned off before proceeding any further!**
2. Plug the DC power plug into the wall and into the “Quick Connect – Quick Select Box”
3. Turn on the “Quick Connect – Quick Select Box”
4. Connect the ButtKicker Power Amplifier output to the single pair of terminals on the “Quick Connect – Quick Select Box” marked “To Amp.” on the rear of the box, which is the same side the on / off switch and power cord are on.

5. Turn the dial on the top of the box to the number of ButtKickers that you have installed. (This should illuminate that number of indicator lights on the front of the box). Positions #1 - #4 are labeled
6. Connect one ButtKicker to each pair of terminals below an illuminated indicator light. Use terminal #1 for connecting only one ButtKicker, terminal #1 and #2 for connecting two ButtKickers and so on
7. Turn on your home theater (including the ButtKicker Amplifier) and make sure the system is working properly
8. Adjust the amplifier output so that the ButtKicker is at a comfortable level
9. Do NOT change the number of ButtKickers selected on the "Quick Connect – Quick Select Box" while the ButtKicker Power Amplifier is turned on

Note: Changing the number of ButtKickers connected to the ButtKicker Power Amplifier will affect the power that each ButtKicker receives, and consequently how strong the effect is felt from each ButtKicker. The gain (volume control) on the amplifier may need to be adjusted each time you change the number of ButtKickers in your system.

Connecting the ButtKicker Power Amplifier to an A/V receiver:

1. If a subwoofer is being used as part of the system, disconnect the subwoofer's RCA cable from the "subwoofer out" on the A/V receiver and insert the single male end of the supplied RCA "Y" adaptor into the receiver's "subwoofer out"
2. Connect one end of the supplied 6' RCA cable to one female leg of the "Y" adaptor
3. Connect the other end of the 6' RCA cable to the RCA input on the back of the ButtKicker Power Amplifier
4. Connect the subwoofer's cable to the other female leg of the "Y" adaptor
5. If you are not using a subwoofer as part of the home theater system then simply connect directly from the A/V receiver's "subwoofer out" to the ButtKicker Power Amplifier's RCA input using the supplied 6' RCA cable. If your A/V receiver's does not have a RCA for the subwoofer then use the enclosed "Speaker Level Interface Adaptor" to connect to the A/V receiver.

Support:

Please DO NOT contact the store where you purchased this product for support.

Contact: The Guitammer Company Inc.
1-888-676-2828, 8:30 am – 5:30 pm EST
or, email, support@guitammer.com
or visit us on the web at: www.thebuttkicker.com

Warranty:

This Guitammer Company product is warranted against defects in materials and workmanship for a period of two (2) years from the date of purchase by the original end-user. Items returned for repair under warranty will be repaired or replaced at the sole discretion of The Guitammer Company without charge for materials or labor, providing such items are returned for inspection, transportation prepaid, to The Guitammer Company or an authorized service center all repaired or replaced items will be returned freight collect. Warranties do not apply to products that have been subjected to abuse, accident, modifications, improper handling or installation, or repairs made by anyone other than The Guitammer Company or an authorized service center. The Guitammer Company shall be the final authority in the determination of all warranty service claims.