
Quick-Start Guide TABLETOP CONTROLLER

ControLinc[™] V2 (#2430)

The Tabletop Controller allows you to use the power of $\mathsf{INSTEON}^{\mathsf{M}}$ to control your home.

Need Help? For assistance call your friendly INSTEON support person @ 800-SMARTHOME (800-762-7846)

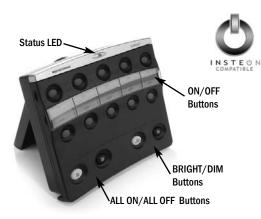

Set Up Your Tabletop Controller to Remotely Control an INSTEON Device

- **Step 1.** Two Signal Enhancers (SignaLinc[™] RF #2442) **must** be installed if your home does not already have them.
- Step 2. Plug the Tabletop Controller into an unswitched wall outlet.
- **Step 3.** Choose the device you would like to control (e.g. Lamp Dimmer, Appliance Module, SwitchLinc[™]), making sure it is properly installed.
- Step 4. On your Tabletop Controller Press and hold the ON button of your choice for 10 seconds until the Status LED begins blinking slowly then release.
 Your Tabletop Controller is now in setup mode. You now have 4 minutes to complete step 5.



Step 5. Select the device you would like to control and follow the setup instructions from the table below:

Device	Setup Instructions
Lamp Dimmer	• Press and hold the Lamp Dimmer's SET button for 3 seconds until the lamp blinks or turns on then release. The Tabletop Controller will beep and the Status LED will stop blinking.
Appliance Module	• Press and hold the Appliance Module's SET button for 3 seconds then release. The Tabletop Controller will beep and the Status LED will stop blinking.
SwitchLinc	• Press and hold the SwitchLinc's ON button for 3 seconds until the light blinks or turns on then release. The Tabletop Controller will beep and the Status LED will stop blinking.
KeypadLinc	• Press and hold the KeypadLinc's SET button for 3 seconds until the light blinks or turns on then release. The Tabletop Controller will beep and the Status LED will stop blinking.
Other INSTEON Enabled Devices	See device's Quick-Start Guide or User's Guide

Step 6. On the Tabletop Controller press the ON and OFF buttons several times to make sure everything is working properly.

Congratulations! You Can Now Remotely Control Your INSTEON Device

Smarthome Limited Warranty

Smarthome warrants to the original consumer of this product that, for a period of two years from the date of purchase, this product will be free from defects in material and workmanship and will perform in substantial conformity to the description of the product in the owner's manual. This warranty shall not apply to defects or errors caused by misuse or neglect.

Quick-Start Guide TABLETOP CONTROLLER

Need Help? For assistance call your friendly INSTEON support person @ 800-SMARTHOME (800-762-7846)



Using your Tabletop Controller

Five sets of ON/OFF buttons are used to control your devices.

- Tap the ON button to turn your lamp on.
- Tap the OFF button to turn your lamp off.
- Press and hold the ON button to brighten your lamp.
- Press and hold the OFF button to dim your lamp.

ALL ON and ALL OFF buttons control all of your lamps.

- Tap the ALL ON button to turn on all lamps.
- Tap the ALL OFF button to turn off all lamps.

BRIGHT and DIM buttons control the brightness level of all of your lamps.

- Press and hold the BRIGHT button to brighten your lamp.
- Press and hold the DIM button to dim your lamp.

Troubleshooting Tips

- The LED on the Tabletop Controller is not turning on.
 - Make sure you are not on a switched outlet.
- The LED on the Tabletop Controller will not flash and enter into setup mode.
- Press and hold for a longer amount of time. Remember, 10 seconds is a pretty long time! •The LED on the Tabletop Controller is still flashing after enrolling a Lamp Dimmer.
- You may be in Scene Setup (multilink) mode. Tap the on button to take it out of this mode. •Factory Reset Instructions

Unplug the Tabletop Controller for about 10 seconds. While holding down the BRIGHT button on the Tabletop Controller, plug it in continuing to hold down the BRIGHT button. Release the BRIGHT button. After several seconds, the Status LED will illuminate steadily, indicating that reset is complete.

The advanced User's Guide can be found at www.smarthome.com/2430.html

Optional If You Own an X10 Device

Linking the Tabletop Controller to an X10 device

- 1. On the Tabletop Controller, press and hold the ALL ON and DIM buttons at the same time for 3 seconds, then release. The Tabletop Controller will beep and the Status LED will begin to blink once per second.
- 2. Press and release the ON button you want to use. The Tabletop Controller will beep.
- 3. Open the Tabletop Controller cover by lifting it from the top.
- Press and release the button that represents the X10 house code (i.e. A,B, etc.) of the device you want to link to. The Tabletop Controller will beep.
- 5. Press and release the button that represents the X10 unit code (i.e. 1, 2, etc.) of the device you want to link to.

The Tabletop Controller will beep twice and the Status LED will remain on.

6. Close the cover.

Unlinking the Tabletop Controller from an X10 device

1. On the Tabletop Controller, press and hold the ALL ON and DIM buttons at the same time for 3 seconds, then release.

The Tabletop Controller will beep and the Status LED will begin to blink once per second.

- 2. Release the ALL ON and DIM buttons.
- 3. Press and hold the OFF button for the desired ON/OFF pair for 3 seconds, then release. The Tabletop Controller will beep twice and the Status LED will remain on.

Smarthome Limited Warranty

Smarthome warrants to the original consumer of this product that, for a period of two years from the date of purchase, this product will be free from defects in material and workmanship and will perform in substantial conformity to the description of the product in the owner's manual. This warranty shall not apply to defects or errors caused by misuse or neglect.

© Copyright 2005 Smarthome, 16542 Millikan Ave., Irvine, CA 92606-5027 800.SMART.HOME - 949.221.9200 - www.smarthome.com